

# SULO AU 4 WHEELED BIN INSTALLATION GUIDE

Before use, please install the hinge pins to ensure the lid is correctly attached.


## STEP 1:

PLACE THE LID ON THE BIN



## STEP 2:

ALIGN THE HINGE PIN KEY  
WITH HANDLE KEYWAY SLOT  
ON UNDERSIDE OF LID HINGE

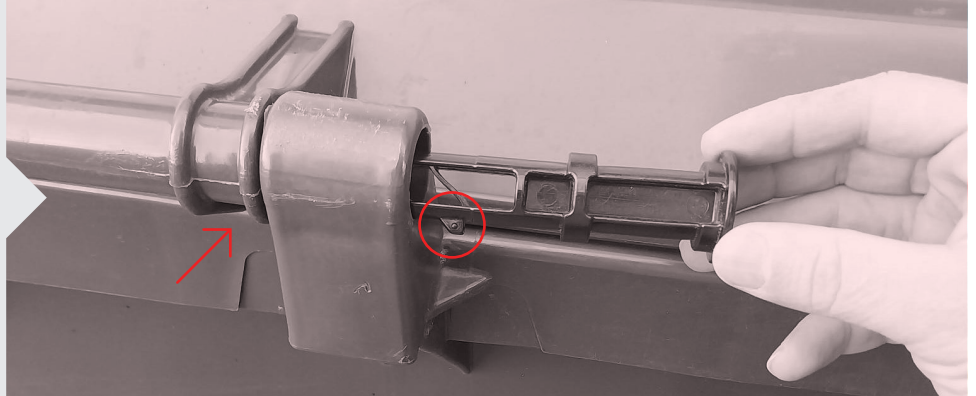


## STEP 3:

PUSH THE HINGE PIN  
THROUGH THE HANDLE  
CORE TO ENGAGE WITH LID  
HINGE KEYWAY SLOT, AND



## STEP 4:

ENSURE HINGE PIN KEYS ARE  
ENGAGED WITH THE HANDLE  
CORE 'KEYWAY' SLOTS

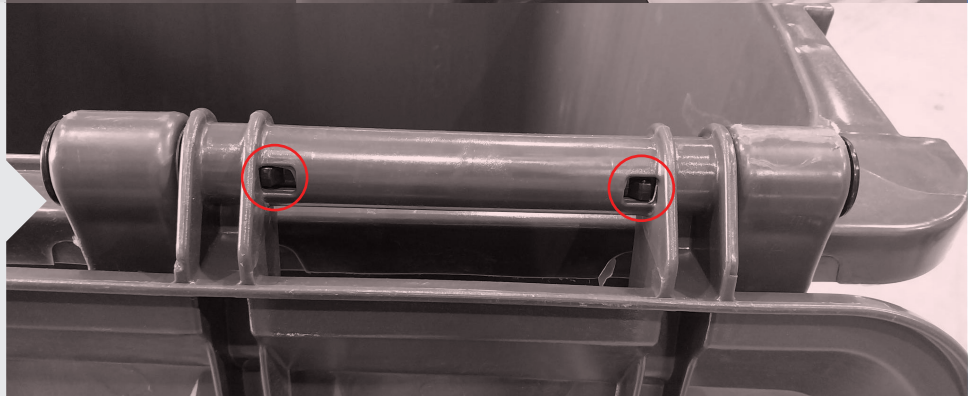

### Contact Us

Pact Group Head Office  
Level 5, Building 1, 658 Church St  
Cremorne, VIC, 3121

Tel: 1300 364 388  
sulosaes@pactgroup.com